 


## Assembly instructions for Panel Stay #15001 TV Security Mount

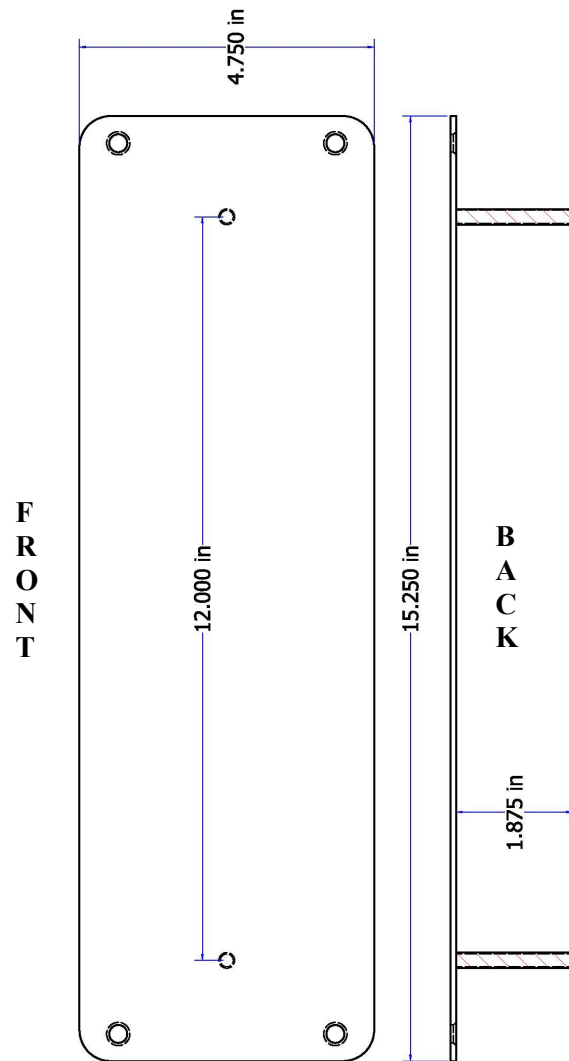

### LG Models: 32LG500H & 32LG700H

The #15001 Panel Stay is typically used with granite or wood surfaces that have been predrilled to accept this TV Security Mount. If there are no preexisting holes, a template will need to be created. The template should have two 3/4" diameter holes. The hole centers on the template should match the location of the threaded studs on the bottom of the Security Mount. Hole centers are 12" center. The template should be positioned on the furniture top in the desired location of the TV. Once the holes are drilled, proceed with the mounting instructions below:

1. Carefully turn TV onto it's side. Attach the Panel Stay to the base of the TV using the four **M5 x 12mm bolts**. Note: These four screw holes are counter sunk. Mount so that the bolt sits flush in the hole and the four threaded studs extend downward away from the TV.
2. Carefully place the television and Panel Stay on the dresser top. The two threaded studs should be inserted into the predrilled holes.
3. Using the **#3 security socket**, install the two **washers** and the two **#1501 Edelen security lock nuts** onto each threaded stud. The television is now secure.

 
**Questions? Dial: 888-4EDELLEN (888-433-3536) Ask for the Security Plate Team!**



8901 Kelso Drive  
Baltimore, MD 21221  
Office: 410/918-1200  
Fax: 410/918-0964



*Assembly instructions for Panel Stay #15001 TV Security Mount*

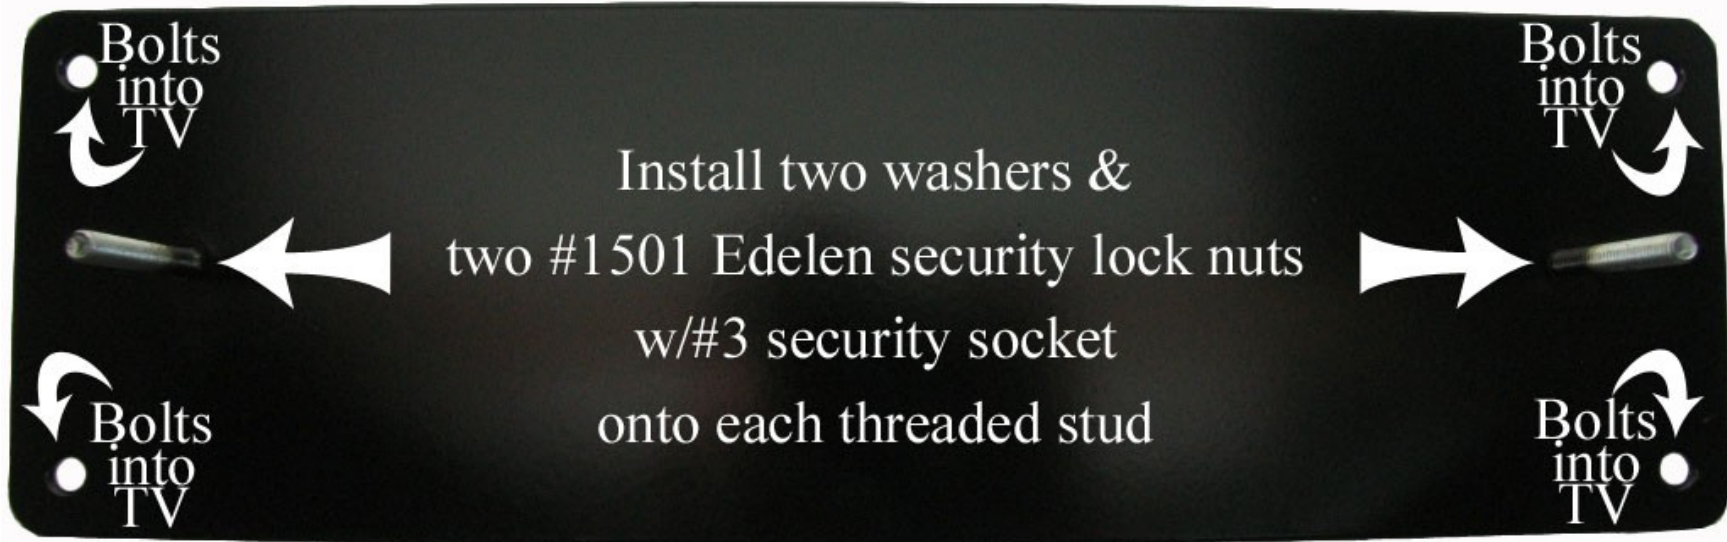

M5 x 12mm  
Bolt



Washer



#1501 Edelen  
Security Lock Nut



#3 Security Socket



8901 Kelso Drive  
Baltimore, MD 21221  
Office: 410/918-1200  
Fax: 410/918-0964

